


#1801 STOCK PEGBOARD ROTARY

BASE ASSEMBLY

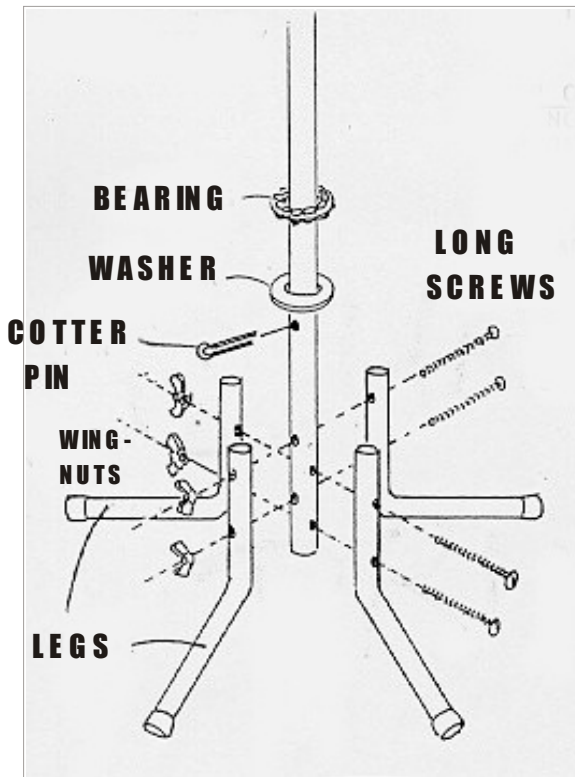

STEP THREE: Assemble PEGBOARD PANELS to METAL CENTERS as shown with panels offset and continuing in this fashion until all 4 panels are assembled.

SPECIAL NOTE: Top and middle metal centers are to face upward with one bottom metal center will be in upside down position as shown. Also, top metal center should be assembled 2 holes down on all panels, while bottom metal center will be at lowest hole position. Assemble middle metal center in center of panels (or 24 holes from top edge of panel).

STEP FOUR: Place pegboard spinner over center pole to rest on washer.

STEP FIVE: Insert SIGN HOLDER ends into top of unit. (Square notched corners as shown.)

NASHVILLE DISPLAY Mfg. Co.

1415 ELM HILL PIKE NASHVILLE, TN 37210 615-255-6331

STEP ONE: Attach LEGS to CENTER POLE making sure holes correspond so that top of LEGS are even.

STEP TWO: insert COTTER PIN into hole and spread end. Place WASHER and BEARING over pole to rest on pin.

SPINNER ASSEMBLY

